



DIRENZA
PROVEN PERFORMANCE

FITTING GUIDE

VW Golf MK5 1.4 TSI Air Induction Kit

V@/Öa^}: æKY IÖ[|ÁT sí ÁÈ ÁÙÜÖ[|áÜÖÁsÁs ÁÖÖ @Á Áííí{ æ & Èæ ÁÈ æ \^Á
 ä ä ~ &ä } Á ^ • c { ÈÜ ~ Á ä * Á & ^ æ ^ á Á ä |, Á ä ä Á Á í í { æ & Á ç Á Á @ Á ç & Á ä Á ç Á
 • ^ ç] ÈV @ Á ç ä ä Á ä ä ä Á | [ç ä • Á @ Á } * ä Á ä ä [| ^ Á ç * ^ } Á • ^ | ä * Á Á [, Á Á
 * ä • Á ä Á Á ^ ä ä ä ä ~ &ä } Á | ä ^ È

DISCLAIMER

ÈÖÄ[, Á @ Á ^ @ Á Á Á Á [| Á {] | ^ c | Á í Á í ä • ç | ä } È
 ÈY ^ Á Á & { { ^ } á Á @ Á @ Induction Kit / Á Á • ç | ^ Á Á Á Á | | ^ • • ä } æ È
 ÈÖa^}: æ Á [Á •] [] • ä | Á | Á ä ^ Á ^ @ Á Á ä æ æ ^ Á | Á Á • [] æ Á Á Á ^ Á Á Á Á • ç | ä }
 Á | | : È | ä ~ ^ Á Á Á { [ç ä Á - Öa^}: æ | | ä ~ & • È

TOOLS REQUIRED

- Øæ@ æ Á & ^, á ä ^ í
- ÈÜ @ ä • Á & ^, á ä ^ í
- Spring Clips
- T25 Bit & Driver
- 5mm Hex Key

- 1x Air Filter
- 1x Metal Air Box
- 1x Aluminum Pipe
- 3x Jubilee Clip
- 3x Screws
- 3x Washers
- 2x Mounting Bobbin
- Edging Trim
- 1x Silicone Joiner





1. Open the bonnet.



2. Undo the 5mm allen screw.



3. Remove the intake hose spring clip.



4. Remove vacuum pipe from clips.



5. Remove vacuum pipe from intake pipe.



6. Remove the plastic trim.



7. Pull up and remove the entire air box assembly.




8. Remove 2x T25 screws and remove trim.



9. Insert rubber bobbins into the Direccion airbox/heat shield.



10. Step 8 continued.

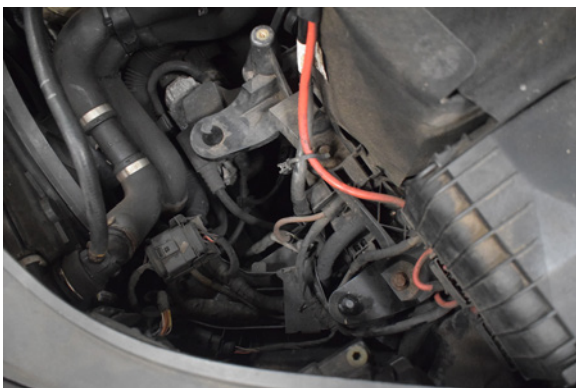

11. The Direccion housing sits on the OEM lugs.



12. Lift the Air Filter housing into position.



13. Place onto OEM lugs and push into position.



14. Ensure pipe sits in the slot in the Air Filter housing.



15. Secure using 2x T25 screws.



16. Fit the silicone to the inlet pipe with 2x jubilee clips.



17. Mount the bracket to the hard pipe.



18. Place the hard pipe into position.



19. Step 18 continued.



20. Secure hard pipe bracket to the car using 5mm allen key.



21. Fit Air Filter onto the end of the hard pipe.



22. Secure to the hard pipe by tightening the jubilee clip.



23. Tighten 2x jubilee clips securing the hard pipe to the OEM inlet pipe.



24. Your Induction Kit is now installed.

You may also like...



VW Golf 5x112 20mm
Wheel Spacers



VW Golf MK5 1.4 1.6 40mm
Lowering Springs.

THANKS FOR YOUR ORDER!

We really appreciate you choosing Direnza Performance for your recent purchase.

We are always looking to feature your cars on our Social Media. As a result, we are asking you to **tag and follow** us so we can keep the community growing! **@DIRENZAPERFORMANCE**

#DIRENZA #DIRENZAPERFORMANCE

